



**KALIBRGUN**



**ARGUS**

**MULTI-SHOT PRE-CHARGED AIR RIFLE CERTIFICATE  
USERS MANUAL**

---

READ MANUAL BEFORE USE.  
ALWAYS REMEMBER AND APPLY THE SAFETY CODE.

# **ATTENTION!**

**Fill the air cylinder only with clean  
and dry compressed air**

**IT IS STRICTLY FORBIDDEN  
to fill a cylinder with higher  
pressure then specified**



# **WARNING**



## **DANGER**



**Danger of  
explosion!**

**Overfilled compressed  
air cylinder**



# **WARNING**



# WARNING

**Read and understand manual before filling, loading or shooting your gun.**

**This airgun is intended for use by those 18 years of age or older.**

**Not a toy.** Adult supervision required. Misuse or careless use may cause serious injury or death. May be dangerous up to 1,000 yards.

**Use only compressed air in your KalibrGun airgun.** Use no other gases – including oxygen, which can cause a fire or explosion that may result in serious injury or death.



# WARNING



## THE OVERALL LOOK AND INDIVIDUAL PARTS:



1. Loading lever
2. Air cylinder
3. Barrel with moderator
4. Weaver rail
5. Pressure gauge
6. Rifle butt
7. Stock
8. Trigger
9. Magazine
10. Safety

## PRODUCT INFORMATION

Air rifle complies with standart regulations. Unless otherwise specified the air rifle is the standart model with the energy of 7,5 J.

The rifle can be produced in various versions according to customers requirements.

## PURPOSE OF USE

Air rifle is designed for training and amateur use. Use lead pellets only. Air rifles are used primarily for sports shooting range - outdoor or indoor, at temperatures from – 0 to +30 degrees Celsius.

## TECHNICAL PARAMETERS

### Argus 45

caliber	4,5(.177), 5,5(.22)
muzzle energy	7,5 J
overall dimensions	650x208x56 mm
barrel length	450 mm
weight	3,5 kg
trigger weight (adj.)	2-10 N
trigger pull length (adj.)	1-5 mm
working pressure	300-110 bar
air cylinder volume	250 cm3
shooting mode	Repeater


### Argus 60

caliber	5,5(.22) 6,35(.25) 7,62(.30)
muzzle energy	7,5 J
overall dimensions	800x208x56 mm
barrel length	600 mm
weight	3,8 kg
trigger weight (adj.)	2-10 N
trigger pull length (adj.)	1-5 mm
working pressure	300-110 bar
air cylinder volume	350 cm3
shooting mode	Repeater

## PREPARATION AND USE OF THE PRODUCT:

### Filling with air:

When filling the rifle it is necessary to check if the filling valve is clean without impurities, or any damage. On the pressure bottle it is necessary to lubricate the sealing ring (rubber seal) with silicone and screw it into the hole in the filling valve.

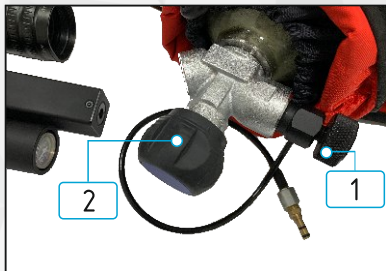

Plug the tube into the hole in the air cylinder. Check the cap of the safety valve of the pressure (1) and open the valve of the pressure bottle (2).



Close the valve of the pressure bottle and pull out the filling nipple.

### Manometer:

Blue field is for 0-100 bar, green is for 100-200 bar, yellow field is for 200-300 bar, red field is for 300 bar and more.


In order to prolongue the air cylinder durability, we recommend to pressurise between 200-250 bar.

## Loading the gun:

Load the magazine with the appropriate lead pellets according to the caliber.



The magazine has a spring. Rotate the inner part of the magazine anticlockwise and insert the pellets one by one into the magazine.

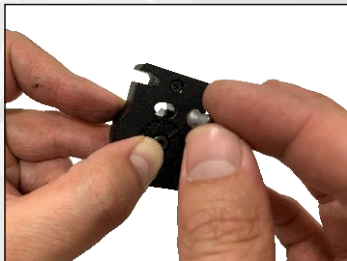

Move the loading lever to very rear position.



Get the magazine into position by pushing on its block from above and then from the side.



To remove the magazine from the rifle, pull the loading lever to the very back and simply push onto the magazine from the left side.

Rod (1) on the picture indicates, that the rifle is prepared for shooting.



Button (2) on the picture serves to lock the magazine against turning. In the upper position of the button, the magazine is unlocked and rifle is ready for multi-shot mode.

## Safety:

The safety locks the trigger. Red dot shows, that the safety is off and it possible to pull the trigger.



To apply the safety catch, move the safety button to upper position.



## OPERATION AND MAINTENANCE OF THE AIR RIFLE

In operation it is necessary to check the condition of the rubber sealing parts of the valve, and seals on the rear part of the barrel.

Check the cleanliness of both, the pressure bottle valve and the air cylinder opening. Treat the metal parts with the properly chosen oil.

When taking care of wooden parts of the air rifle (gun stock), do not use the furniture agents.

Store and carry the gun in the bag with a soft lining.

### 12 months product warranty

Warranty begins with the day of sale. The seller confirms the warranty into the technical certificate of the air rifle, providing the stamp of the sales organization and the dealer's signature.

Warranty does not cover:

- The safekeeping, usage or transportation of the air rifle not according to the rules.
- In case of the lack of force majeure or the third party after delivery of the air rifles to the buyer.
- The intervention into the gun mechanism, without the written permission of the manufacturer.

The reparation can be performed only by authorized repairers.

The list is available by the manufacturer.

In addition, ask your local seller for the information about the service center.

Repairer has to perform a service within 5 working days from the moment of handover of the air rifles. In the event that service does not have necessary spare parts, repair term is 30 working days, and the dealer sends the air rifle to the manufacturers.

During the warranty period, the manufacturing defects of the air rifles will be eliminated free of charge. After the warranty period, repairs are paid in accordance with Czech law.

Pre-charged pneumatic air rifle

№ \_\_\_\_\_

Air rifle is conserved and packed  
correspondingly to the requirements.

Date of manufacture:

« \_\_\_\_\_ » \_\_\_\_\_ 20 \_\_\_\_\_

\_\_\_\_\_

Date of sale:

« \_\_\_\_\_ » \_\_\_\_\_ 20 \_\_\_\_\_

Period, for which it is possible to keep the product  
without re-preservation, is 24 months.

It is necessary to keep the air rifle in the room with  
natural air exchange, not air-conditioned.

Temperature and humidity must be more stable than  
on the open place (in concrete, brick and similar  
places with thermal insulation).

### Notice:

To avoid deformation of the spring in the event  
of prolonged disuse, it is needed to discharge  
the air rifle.

Always be aware that your actions will be under scrutiny  
of other members of the public who may not share your  
enthusiasm for air rifles.

Bad practises promote bad publicity.



## PREVENTIVE MAINTENANCE AND REPAIR

_____		_____
Start time		_____
		_____
		_____
		_____
		_____
_____		_____
End time		_____
		_____
		_____
		_____
		_____

_____		_____
Start time		_____
		_____
		_____
		_____
		_____
_____		_____
End time		_____
		_____
		_____
		_____
		_____

## PREVENTIVE MAINTENANCE AND REPAIR

_____		_____
Start time		_____
		_____
		_____
		_____
		_____
_____		_____
End time		_____
		_____
		_____
		_____
		_____

_____		_____
Start time		_____
		_____
		_____
		_____
		_____
_____		_____
End time		_____
		_____
		_____
		_____
		_____

## PREVENTIVE MAINTENANCE AND REPAIR

_____		_____
Start time		_____
		_____
		_____
		_____
		_____
_____		_____
End time		_____
		_____
		_____

_____		_____
Start time		_____
		_____
		_____
		_____
		_____
_____		_____
End time		_____
		_____
		_____



**KALIBRGUN**

---

Na Louzi 940/3, 101 00, Prague, Czech Republic  
[www.kalibrgun.com](http://www.kalibrgun.com)