



KALIBRGUN



CAPYBARA

MULTI-SHOT PRE-CHARGED AIR RIFLE CERTIFICATE

USERS MANUAL

READ MANUAL BEFORE USE.
ALWAYS REMEMBER AND APPLY THE SAFETY CODE.

ATTENTION!

**Fill the air cylinder only with clean
and dry compressed air**

**IT IS STRICTLY FORBIDDEN
to fill a cylinder with higher
pressure then specified**



WARNING



DANGER



**Danger of
explosion!**

**Overfilled compressed
air cylinder**



WARNING



WARNING

Read and understand manual before filling, loading or shooting your gun.

This airgun is intended for use by those 18 years of age or older.

Not a toy. Adult supervision required. Misuse or careless use may cause serious injury or death. May be dangerous up to 1,000 yards.

Use only compressed air in your KalibrGun airgun. Use no other gases – including oxygen, which can cause a fire or explosion that may result in serious injury or death.



WARNING

THE OVERALL LOOK AND INDIVIDUAL PARTS:



1. Loading lever
2. Air cylinder
3. Barrel with moderator
4. Weaver rail
5. Pressure gauge
6. Rifle butt
7. Stock
8. Trigger
9. Magazine
10. Safety

PRODUCT INFORMATION

Air rifle complies with standart regulations. Unless otherwise specified the air rifle is the standart model with the energy of 7,5 J.

The rifle can be produced in various versions according to customers requirements.

PURPOSE OF USE

Air rifle is designed for training and amateur use. Use lead pellets only.

Air rifles are used primarily for sports shooting range - outdoor or indoor, at temperatures from – 0 to +30 degrees Celsius.

TECHNICAL PARAMETERS

Capybara

caliber	5,5(.22), 6,35(.25)
muzzle energy	7,5 J
overall dimensions	750x150x50 mm
barrel length	480 mm
weight	3,3 kg
trigger weight (adj.)	2-10 N
trigger pull length (adj.)	1-5 mm
working pressure	300-110 bar
air cylinder volume	200 cm3
shooting mode	Repeater(semi-auto)

PREPARATION AND USE OF THE PRODUCT:

Filling with air:

When filling the rifle it is necessary to check if the filling valve is clean without impurities, or any damage. On the pressure bottle it is necessary to lubricate the sealing ring (rubber seal) with silicone and screw it into the hole in the filling valve.



Plug the tube into the hole in the air cylinder. Check the cap of the safety valve of the pressure (1) and open the valve of the pressure bottle (2).



Close the valve of the pressure bottle and pull out the filling nipple.

Manometer:

Blue field is for 0-100 bar, green is for 100-200 bar, yellow field is for 200-300 bar, red field is for 300 bar and more.

In order to prolongue the air cylinder durability, we recommend to pressurise between 200-250 bar.

Loading the gun:

Load the magazine with the appropriate lead pellets according to the caliber.



Pull the loading lever to very rear position and fixing position by button inside knob loading lever.



Get the magazine into position by pushing on its block from above and then from the side.



Releasing the loading lever will now result in loading the pellet into the barrel.

Rod (2) on the picture show the rifle prepared for shooting



To remove the magazine from the rifle, pull the loading lever to the very back and simply push onto the magazine from the left side.

Safety:



On the picture above, the safety is off and it possible to pull the trigger. To enable it, push into the rear half of the safety.

OPERATION AND MAINTENANCE OF THE AIR RIFLE

In operation it is necessary to check the condition of the rubber sealing parts of the valve, and seals on the rear part of the barrel.

Check the cleanness of both, the pressure bottle valve and the air cylinder opening. Treat the metal parts with the properly chosen oil.

When taking care of wooden parts of the air rifle (gun stock), do not use the furniture agents.

Store and carry the gun in the bag with a soft lining.

12 months product warranty

Warranty begins with the day of sale. The seller confirms the warranty into the technical certificate of the air rifle, providing the stamp of the sales organization and the dealer's signature.

Warranty does not cover:

- The safekeeping, usage or transportation of the air rifle not according to the rules.
- In case of the lack of force majeure or the third party after delivery of the air rifles to the buyer.
- The intervention into the gun mechanism, without the written permission of the manufacturer.

The reparation can be performed only by authorized repairers.

The list is available by the manufacturer.

In addition, ask your local seller for the information about the service center.

Repairer has to perform a service within 5 working days from the moment of handover of the air rifles. In the event that service does not have necessary spare parts, repair term is 30 working days, and the dealer sends the air rifle to the manufacturers.

During the warranty period, the manufacturing defects of the air rifles will be eliminated free of charge. After the warranty period, repairs are paid in accordance with Czech law.

Pre-charged pneumatic air rifle

№ _____

Air rifle is conserved and packed
correspondingly to the requirements.

Date of manufacture:

« _____ » _____ 20 _____

Date of sale:

« _____ » _____ 20 _____

Period, for which it is possible to keep the product
without re-preservation, is 24 months.

It is necessary to keep the air rifle in the room with
natural air exchange, not air-conditioned.

Temperature and humidity must be more stable than
on the open place (in concrete, brick and similar
places with thermal insulation).

Notice:

To avoid deformation of the spring in the event
of prolonged disuse, it is needed to discharge
the air rifle.

Always be aware that your actions will be under scrutiny
of other members of the public who may not share your
enthusiasm for air rifles.

Bad practises promote bad publicity.

PREVENTIVE MAINTENANCE AND REPAIR

_____		_____
Start time		_____

_____		_____
End time		_____

_____		_____
Start time		_____

_____		_____
End time		_____

PREVENTIVE MAINTENANCE AND REPAIR

_____		_____
Start time		_____

_____		_____
End time		_____

_____		_____
Start time		_____

_____		_____
End time		_____

PREVENTIVE MAINTENANCE AND REPAIR

_____		_____
Start time		_____

_____		_____
End time		_____

_____		_____
Start time		_____

_____		_____
End time		_____



KALIBRGUN

Na Louzi 940/3, 101 00, Prague, Czech Republic
www.kalibrgun.com