

SINGLE-SHOT PRE-CHARGED AIR PISTOL CERTIFICATE USERS MANUAL

READ MANUAL BEFORE USE.
ALWAYS REMEMBER AND APPLY THE SAFETY CODE.

# **ATTENTION!**

Fill the air cylinder only with clean and dry compressed air

# IT IS STRICTLY FORBIDDEN

to fill a cylinder with higher pressure then specified

# **A WARNING**

Read and understand manual before filling, loading or shooting your gun.

This airgun is intended for use by those 18 years of age or older.

**Not a toy.** Adult supervision required. Misuse or careless use may cause serious injury or death. May be dangerous up to 1,000 yards.

**Use only compressed air in your KalibrGun air gun.** Use no other gases – including oxygen, which can cause a fire or explosion that may result in serious injury or death.

# **A WARNING**

# **A WARNING**





Danger of explosion!

Overfilled compressed air cylinder

# **A WARNING**



## Concerning model:

Ocelot.

(Model shown is Ocelot riflescope not included)

- 1. Hammer
- 2. Latch
- 3. Thumb piece
- 4. Weaver rail
- 5. Barrel and moderator
- 6. Pressure gauge
- 7. Air cylinder
- 8. Trigger
- 9. Pistol grip

#### PRODUCT INFORMATION

Air pistol complies with standart regulations. Unless otherwise specified the air pistol is the standart model with the energy of 7,5 J.

The pistol can be produced in various versions according to customers requirements.

#### PURPOSE OF USE

Air pistol is designed for training and amateur use. Use lead pellets only.

Air pistols are used primarily for sports shooting range - outdoor or indoor, at temperatures from - 0 to +30 degrees Celsius.

#### TECHNICAL PARAMETERS

#### Ocelot

caliber	5,5 mm
muzzle energy	7,5 J
overall dimensions	360x160x55 mm
barrel length	225 mm
weight	1,4 kg
trigger weight (adj.)	2-10 N
trigger pull length (adj.)	1-5 mm
working pressure	300-80 bar
air cylinder volume	65 cm <sup>3</sup>
shooting mode	single-shot


#### PREPARATION AND USE OF THE PRODUCT:

#### Filling with air:

When filling the rifle it is necessary to check if the filling valve is clean without impurities, or any damage. On the pressure bottle it is necessary to lubricate the sealing ring (rubber seal) with silicone and screw it into the hole in the filling valve.



Pull up the cover of the manometer and plug the tube into the hole in the cylinder. Check the cap of the safety valve of the pressure (1) and open the valve of the pressure bottle (2). It is strictly forbidden to fill a cylinder with higher pressure then specified.

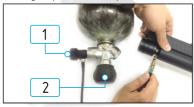

Close the valve of the pressure bottle (2), let the excessive air flow through the safety valve (1) and pull out the filling nipple.



#### Manometer:

Blue field is for 0-100 bar, green is for 100-200 bar, yellow field is for 200-300 bar, red field is for 300 bar and more.

In order to prolongue the air cylinder durability, we recommend to pressurise between 200-250 bar.

### Loading the gun:



Pull the hammer into the rear position.



Push the thumb piece forward.



Push the latch to the left.



Insert the pellet according to the caliber information on the receiver.



Close the latch. The air-pistol is now ready for shooting.



To decock the pistol, pull the trigger while holding the hammer and slowly releasing it to the forward position.

#### OPERATION AND MAINTENANCE OF THE AIR RIFLE

In operation it is necessary to check the condition of the rubber sealing parts of the valve, and seals on the rear part of the barrel.

Check the cleaness of both, the pressure bottle valve and the air cylinder opening. Treat the metal parts with the properly chosen oil.

When taking care of wooden parts of the air rifle (gun stock), do not use the furniture agents.

Store and carry the gun in the bag with a soft lining.



#### WARRANTY CONDITIONS

### 12 months product warranty

Warranty begins with the day of sale. The seller confirms the warranty into the technical certificate of the air rifle, providing the stamp of the sales organization and the dealer's signature.

#### Warranty does not cover:

- The safekeeping, usage or transportation of the air rifle not according to the rules.
- In case of the lack of force majeure or the third party after delivery of the air rifles to the buyer.
- The intervention into the gun mechanism, without the written permission of the manufacturer.

The reparation can be performed only by authorized repairers.

The list is available by the manufacturer. In addition, ask your local seller for the information about the service center.

In the event that service does not have necessary spare parts, repair term is 30 working days, and the dealer sends the air pistol to the manufacturers.

During the warranty period, the manufacturing defects of the air pistols will be eliminated free of charge. After the warranty period, repairs are paid in accordance with Czech law.

#### PRINCIPLES FOR SAFEKEEPING

Pre-charged pneumatic air pistol	
Nō	-
Air pistol is conserved and packed	
correspondingly to the requirements.	
Date of manufacture:	
«	
	_
Date of sale:	
«»20	

Period, for which it is possible to keep the product without re-preservation, is 24 months.

It is necessary to keep the air pistol in the room with natural air exchange, not air-conditioned.

Temperature and humidity must be more stable than on the open place (in concrete, brick and similar places with thermal insulation).

#### Notice:

To avoid deformation of the spring in the event of prolonged disuse, it is needed to discharge the air pistol.

Always be aware that your actions will be under scrutiny of other members of the public who may not share your enthusiasm for air pistols.

Bad practises promote bad publicity.

### PREVENTIVE MAINTENANCE AND REPAIR

	-120		4
Start time			
End time	C (1 (1 (1 (1 (1 (1 (1 (1 (1 (1 (1 (1 (1		
Start time			

### PREVENTIVE MAINTENANCE AND REPAIR

Start time	
	TO DEFINE
End time	
Life diffe	10/02/52
Start time	
End time	

### PREVENTIVE MAINTENANCE AND REPAIR

	-120		4
Start time			
End time	C (1 (1 (1 (1 (1 (1 (1 (1 (1 (1 (1 (1 (1		
Start time			



