




KALIBRGUN

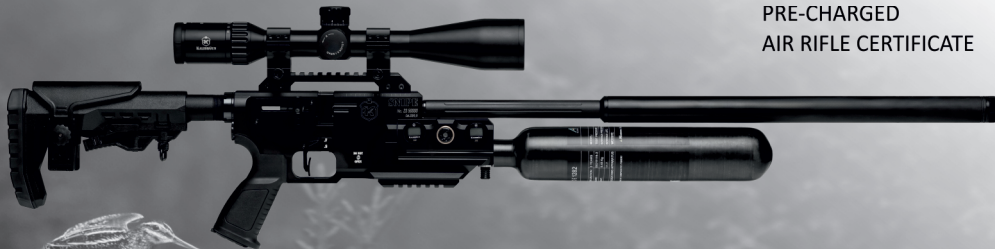

PRE-CHARGED
AIR RIFLE CERTIFICATE



SNIPE

USERS MANUAL

READ MANUAL BEFORE USE.
ALWAYS REMEMBER AND APPLY THE SAFETY CODE.



ATTENTION!

**Fill the air cylinder only with clean
and dry compressed air**

IT IS STRICTLY FORBIDDEN
to fill a cylinder with higher
pressure than specified



WARNING

Read and understand manual before filling, loading or shooting your gun.

This airgun is intended for use by those 18 years of age or older.

Not a toy. Adult supervision required. Misuse or careless use may cause serious injury or death. May be dangerous up to 1,000 yards.

Use only compressed air in your KalibrGun airgun. Use no other gases – including oxygen, which can cause a fire or explosion that may result in serious injury or death.



WARNING



WARNING



DANGER



**Danger of
explosion!**


**Overfilled compressed
air cylinder**



WARNING

The overall look
and individual parts:

SHIPE

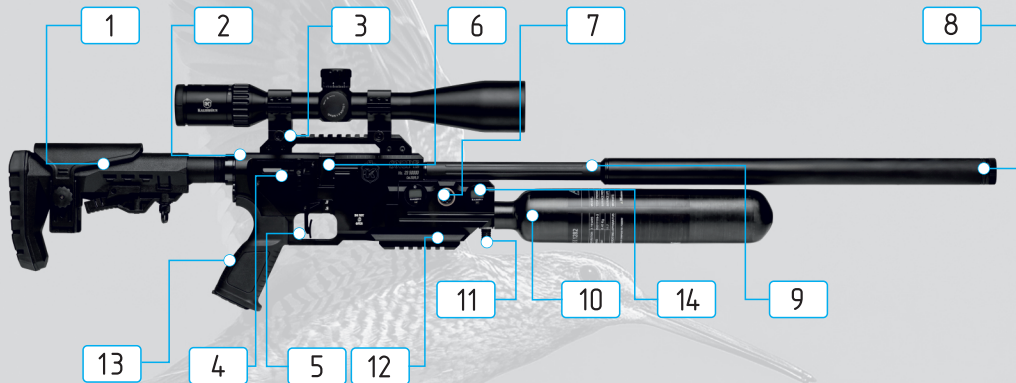

1. AR stock and buffer

2. 11mm dovetail

3. Weaver rail

4. Cocking lever

5. Trigger

6. Magazine

7. External reducer

8. 1/2 UNF Thread

9. Barrel

10. Pressure tank

11. Quick filling port

12. Arca rail + weaver rail

13. AR Style grip

14. Pressure gauge

PRODUCT INFORMATION

Air rifle complies with standart regulations.
Unless otherwise specified the air rifle is the
standart model with the energy of 7,5 J.

The certificate was issued on: _____
(DD.MM.YYYY)

The rifle can be produced in various versions
according to customers requirements.

PURPOSE OF USE

Air rifle is designed for training and amateur use.
Use lead pellets only.
Air rifles are used primarily for sports shooting
range - outdoor or indoor, at temperatures from
0 to +30 degrees Celsius.

TECHNICAL PARAMETERS

SNIPE 45

caliber _____ 4,5 / 5,5 / 6,35 mm
muzzle energy _____ 7,5 J
overall dimensions _____ 950x150x60 mm
barrel length _____ 450mm
weight _____ 3,3 kg
trigger weight (adj.) _____ 2-10 N
trigger pull length (adj.) _____ 1-5 mm
working pressure _____ 300-20 bar
air cylinder volume _____ 360 cm³
shooting mode _____ Mutishot

SNIPE 60

caliber _____ 5,5 / 6,35 / 7,62 mm
muzzle energy _____ 7,5 J
overall dimensions _____ 1100x150x60 mm
barrel length _____ 600 mm
weight _____ 3,6 kg
trigger weight (adj.) _____ 2-10 N
trigger pull length (adj.) _____ 1-5 mm
working pressure _____ 300-20bar
air cylinder volume _____ 530 cm³
shooting mode _____ Multishot

TECHNICAL PARAMETERS

SNIPE 70

caliber	5,5 / 6,35 / 7,62 mm
muzzle energy	7,5 J
overall dimensions	1200x210x50 mm
barrel length	700mm
weight	4,1 kg
trigger weight (adj.)	2-10 N
trigger pull length (adj.)	1-5 mm
working pressure	300-20bar
air cylinder volume	700cm ³
shooting mode	Multishot


PACKAGE

Contents and appearance may vary depending on the model and configuration



ASSEMBLY:

Place the buffer tube (1) on the rifle (2) and screw it in until it stops, release it to the correct angle for the correct side

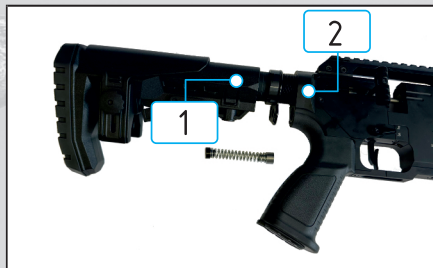

Insert the spring assembly (1) into the bolt house (2).
Position the black guide on the side of the buffer tube



Tighten the nut (1)




PREPARATION AND USE OF THE PRODUCT:

Filling with air:

Pull over the cover (4) of the quick fill port and connect quick fill adaptor (3). Check the cap of the pressure (1) and open the valve of the pressure bottle (2).


It is strictly forbidden to fill a rifle with higher pressure than specified.

Close the valve of the pressure bottle (2), let the excessive air flow through the safety valve (1) and pull out the quick fill adaptor (3).

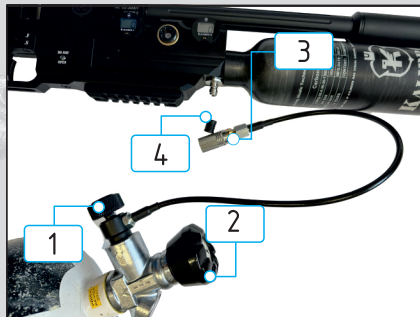


Loading the gun:

Load the magazine with the appropriate lead pellets due to the caliber

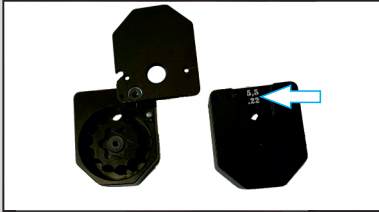


Open the magazine, turn the internal part counter clockwise and insert the first pellet.

Next fill in the rest of the chambers with pellets and close the magazine. Insert the magazine into the rifle.

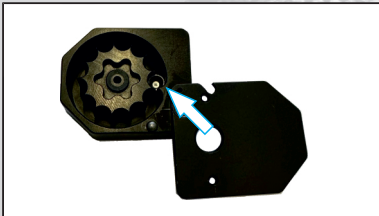

Cocking lever situated in the middle of the rifle, above the trigger.

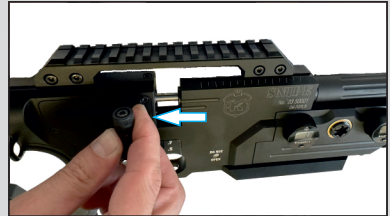

Set the loading lever to the rear position and insert magazine.

Magazine can be installed from both sides of the rifle



After placing the magazine in the correct position in the rifle, move the bolt to the forward-most position until the mechanism closes (click).


Warning: it is very important to close the bolt fully to avoid damage to the rifle when firing.




When the bolt is re-cocked, the bullet will automatically stand in front of the chamber and when the bolt is closed it will reach to put the bullet in the barrel. To keep the barrel free of bullet when re-cocking, remove the magazine from the rifle.

Safety:

The safety catch is located above the trigger. It is locked in the position S - SAFE

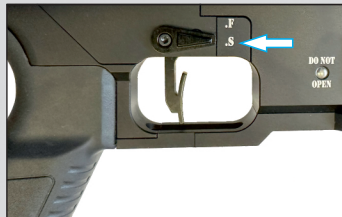

In the F - FIRE position, the trigger is unlocked

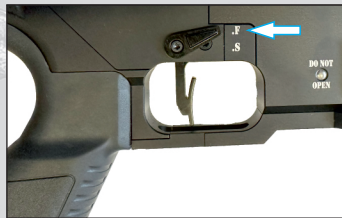



OPERATION AND MAINTENANCE OF THE AIR RIFLE

In operation it is necessary to check the condition of the rubber sealing parts of the valve, and seals on the rear part of the barrel.

Check the cleanness of both, the pressure bottle and the air cylinder valves. Treat the metal parts with the properly chosen oil.

When taking care of wooden parts of the air rifle (gun stock), do not use the furniture agents. Store and carry the gun in the bag with a soft lining.

12 months product warranty

Warranty begins with the day of sale. The seller confirms the warranty into the technical certificate of the air rifle, providing the stamp of the sales organization and the dealer's signature.

Warranty does not cover:

- The safekeeping, usage or transportation of the air rifle not according to the rules.
- In case of the lack of force majeure or the third party after delivery of the air rifles to the buyer.
- The intervention into the gun mechanism, without the written permission of the manufacturer.

The reparation can be performed only by authorized repairers.

The list is available by the manufacturer.

In addition, ask your local seller for the information about the service center.

In the event that service does not have necessary spare parts, repair term is 30 working days, and the dealer sends the air rifle to the manufacturers.

During the warranty period, the manufacturing defects of the air rifles will be eliminated free of charge. After the warranty period, repairs are paid in accordance with Czech law.

Pre-charged pneumatic air rifle

No. _____

Air rifle is conserved and packed correspondingly to the requirements.

Date of manufacture:

« _____ » _____

Date of sale:

« _____ » _____ 20_____

Period, for which it is possible to keep the product without re-preservation, is 24 months.

It is necessary to keep the air rifle in the room with natural air exchange, not air-conditioned.

Temperature and humidity must be more stable than on the open place (in concrete, brick and similar places with thermal insulation).


Notice:

To avoid deformation of the spring in the event of prolonged disuse, it is needed to discharge the air rifle.

Always be aware that your actions will be under scrutiny of other members of the public who may not share your enthusiasm for air rifles.

Bad practises promote bad publicity.

PREVENTIVE MAINTENANCE AND REPAIR

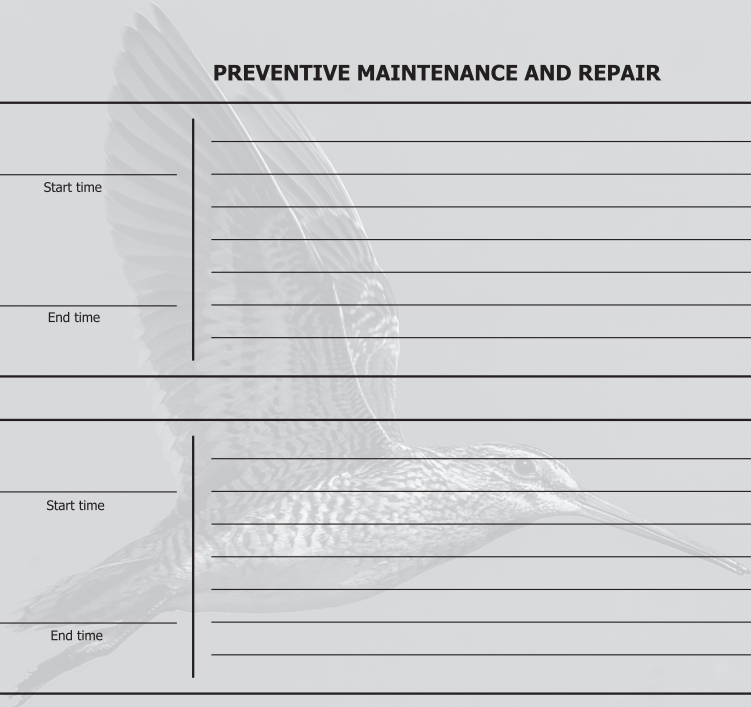


_____	_____
Start time	_____

_____	_____
End time	_____

_____	_____
Start time	_____

_____	_____
End time	_____

PREVENTIVE MAINTENANCE AND REPAIR

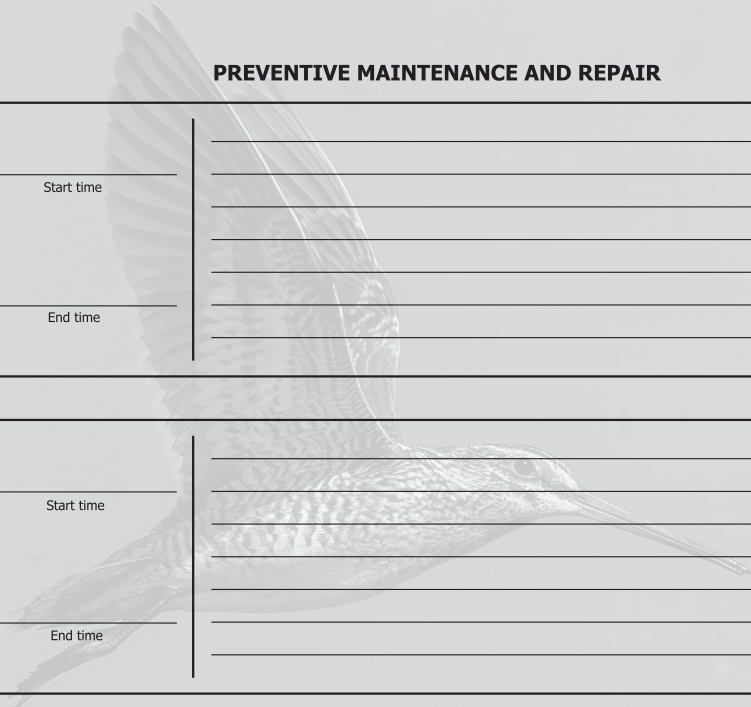

_____	_____
Start time	_____

_____	_____
End time	_____

_____	_____
Start time	_____

_____	_____
End time	_____



KALIBRGUN



Prague 10, Vrsovice, Na louzi 940/3, Czech Republic
www.kalibrgun.com